




printGRIP™


INSTRUCTION SHEET

APPLICATION

IMPORTANT: The side with the **BLANK** backing goes on your pallet.
The side with the printGRIP logo is meant for your apparel.

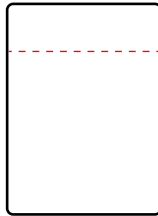

Blank backing
side down

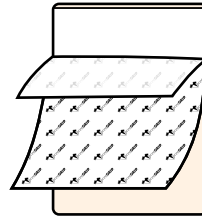

Printed top sheet
side up

- Start with a clean pallet
- Put transfer paper on the pallet. This will help with removal later on.
- Pull up about 2 inches of the blank backing and line up with the back edge of the pallet
- Pull the printed top sheet off and spray printGRIP with water to make it easier to smooth over the pallet.
- Carefully pull off the bottom backing while smoothing the printGRIP sheet down over the pallet. Take your time to avoid air bubbles.
- Dry your printGRIP pad with a cloth or rag. Wrap a strip of tape around the edge on the front and back of the pallet to protect corners from peeling up while printing

NEW SHEET PREP (OPTIONAL)

- Once sheet is applied. Spray with water.
- Use scrub pad to prep surface
- Firmly wipe surface until appearance reaches a matte finish
- An increase in tack should be felt
- Repeat if necessary

- Check out instructional video “Application” on Youtube

*SEARCH: “print-grip application”

CLEAN

Clean the printGRIP sheet when you want to renew tackiness.


1. Spray with water
2. Wipe lint off
3. Dry with cloth or rag. Tackiness comes back only when dried completely.

HELPFUL TIPS

- Keep the release paper to block sections of printGRIP that you don’t need to be tacky.
- Ghost images or ink transfer on the printGRIP sheet can be cleaned off with an on press cleaner.

REMOVAL

- Peel up the tape and transfer paper from the back of the pallet.
- Pull sheet off of the pallet and discard.

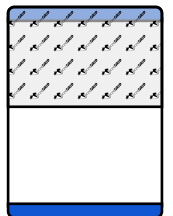

For more information & instructional videos, visit:

www.print-grip.com

THIS PRODUCT IS BROUGHT TO YOU BY

NAZDAR
SOURCEONE

VISIT US ONLINE
SourceOne.Nazdar.com

CALL US
888-578-5713

© 2024 Nazdar. All Rights Reserved.
Specifications subject to change without notice.